

344842



### Description

2 wires/Wi-Fi handsfree connected video internal unit with built-in\* Amazon Alexa® voice assistant, 5" vertical touch screen LCD display and video door entry answering machine.

It has a physical key for door lock release and capacitive keys for the control of the main video door entry functions: handsfree communication, entrance panel activation / camera scrolling and Favourite key (can be configured to activate the quick actions most frequently used — e.g. additional door locks, staircase light control, intercom). There are notification LEDs for: Wi-Fi network connection status, info / notifications and call exclusion.

It is possible to easily interact with the built-in Alexa® voice assistant, either using the dedicated capacitive keys or with your voice, and activate several functions, such as the video door entry functions, smart home, scenarios, reminders etc.

Using the touch display, it is possible to access the notification list, as well as your favourite door entry and security controls (if any). Possibility of voice communication with the switchboard - if present in the system - after a specific call.

The device must be configured by physically connecting the configurators, or using the menu, which will give better possibilities of customisation of associated functions and texts. Thanks to the Wi-Fi connection, you can associate the video internal unit to the Home + Security App (available for Android and iOS). The App allows to use the main video internal unit functions (receiving calls, door lock release, display of the event timeline and activation of the entrance panel/camera cycling). With the Home + Security App, it is also possible to manage the products of the Netatmo Security range (outdoor and indoor cameras, door and window sensors, indoor siren, smoke detector). This allows you to quickly and easily create a Smart security system.

Wall mounted installation using the supplied bracket Possibility of Wi-Fi connection or using RJ45 ethernet cable with the dedicated accessory 344844.

(\*) Alexa® is not available in all languages and all countries. The features and functions of Alexa® may vary depending on location.

### **Related items**

344844 Accessory for connections using the ethernet cable RJ45 346020 Additional power supply

# **Technical data**

Operating temperature: 5 – 40 °C
Power supply voltage from BUS-AV: 21 – 27 V
Additional power supply from 1-2: 27 V
Maximum BUS-AV absorption in operation: 580 mA
Maximum BUS-AV absorption when powered by clamp 1-2: 22 mA
Maximum cable section for each clamp: 2 x 1 mm²

Maximum distance to be able to use Alexa®: 5 m in one 15 m


Maximum distance to be able to use Alexa®: 5 m in optimum ambient

audio condition

Wireless device in compliance with 802.11b/g/n standard, supports 2.4 GHz Wi-Fi band; transmission power < 20 dBm. WEP/WPA/WPA2 safety protocol.

Minimum connection speed of 512 Kbps (0.51 Mbps) for streaming music and other content through Alexa $^{\!\circ}$ 

#### Front view

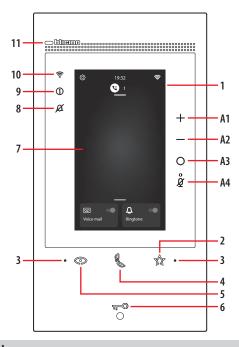

### Legend

- 1. 5" vertical touch screen display
- 2. "Favourites" touch key
- 3. Microphone
- 4. Touch key for answer
- 5. Entrance panel / scrolling activation touch key
- 6. Door release key
- 7. Home Page
- 8. Bell exclusion notification LED
- 9. Notification LED
- 10. Wi-Fi signal notification LED
- 11. Proximity sensor for future application

### LED table

LLD Lable	
a	flashing = incoming call.
M.	steady: communication in progress.
	flashing for 2 seconds: active "Safe Door Lock" function, deactivated
	key.
<u> </u>	flashing (sequence of 2 short flashing): Door open (*) or Professional
W_00	Studio active.
	steady: communication in progress.
	steady for 2 seconds: door opening.
Ø	flashing: ringtone excluded.
(i)	yellow steady: notifications from Alexa®.
•	white steady: answering machine messages.
	steady: forwarding of call, automatic switching on or "Call home"
	function in progress from Home + Security App.
<u>\$</u>	OFF: WI-FI disabled or working correctly.
	flashing: WI-FI on but not connected to the network.
- 0 /	-

(\*) Only available with actuator 346260.

Alexa® conti	rol keys
A1	Key used to increase the volume.
A2	Key used to decrease the volume.
A3	Alexa® enabling key.
A4	"Mute" key, to disable both Alexa® and device microphone.


Note: once powered, the device takes up to 2 minutes to be available for use.

🔘 👢 🏠 flashing at the same time: firmware update in progress.





Rear view

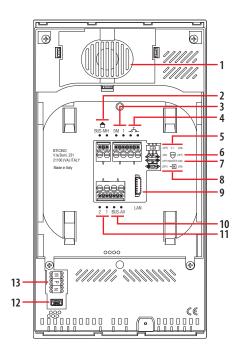


## Legend

- 1. Speaker
- 2. Clamps for connection to the BUS MH (MyHOME) (future application)
- Additional bell connection clamps (5M 1).
   The connection must be point point on the clamps of the additional bells
- 4. Clamps  $_{\bullet}^{\bullet}$  for the connection of an external call to the floor pushbutton
- 5. Micro-switch to enable the additional power supply \*
- 6. Micro-switch for "Safe door lock" function \*
- 7. Micro-switch for "Master" function \*
- 8. Line termination micro-switch \*
- 9. LAN connector
  - For connection using RJ45 cable, use accessory 344844 (not supplied)
- 10. Clamps for connection to the AV BUS (audio video)
- 11. Additional power supply clamps (2-1)
- 12. Service USB interface
- 13. Configurator socket
- \*ON = enabled

OFF = disabled

To activate the function with device not powered

### **Dimensional data**

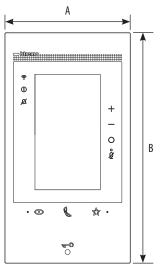



A	В	C
122 mm	222 mm	32 mm

## Configuration

It is recommended to configure the device using the appropriate menu (see the User and installation manual).

Alternatively, it is also possible to use physical configurators as shown below.

٨	Л	F	•	1	١
0	0	0	0	0	0
0	0	0	0	0	0

**MM** = Mode of operation according to the tables on the following pages.


PP = Address of the EP of which you can open the Door Lock with Handset idle, and to which you can send the auto-on command.

NN = Device address.





### **Physical configuration**

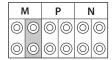

The functions that can be attributed to the Preferred key ( ) using the physical procedure configurator inserted in the MM - (units) socket are the following:

Ν	Л	F	1	V	
0	0	0	0	0	0
0	0	0	0	0	0

The MM (tens) physical configurator defines which 4 actions can be completed from the EDIT FAVORITES menu. The possible configurations are shown in the following table.

MM =	0	Stair

rcase Light Control



Direct control of P+1 Door lock





Direct control of P+2 Door lock





Direct control of P+3 Door lock





P+1 direct auto-switching on







P+2 direct auto-switching on







P+3 direct auto-switching on





**Paging** 





Internal intercom





Enabling/disabling Office function







Activating the EP (configured with P+1) directly without the call or activating actuator 346210 (configured with P+1 and MOD=9)



Door lock opening of EP (configured with P+1) directly without the call or activating the actuator 346210 (configured with P+1 and MOD=5) or activating the actuator 346230 (configured with P+1)



Door lock opening of EP (configured with P+2) directly without the call or activating the actuator (configured with P+2 and MOD=5) or activating the actuator 346230 (configured with P+2)



Door lock opening of EP (configured with P+3) directly without the call or activating the actuator 346210 (configured with P+3 and MOD=5) or activating the actuator 346230 (configured with P+3)



Door lock opening of EP (configured with P+4) directly without the call or activating the actuator 346210 (configured with P+4 and MOD=5) or activating the actuator 346230 (configured with P+4)



Intercommunicability between apartments in systems with apartment interface 346850



Intercommunicability inside an apartment in systems with apartment interface 346850 or intercommunicability between apartments in systems without apartment interface



Intercom on itself, sends the call to all the devices with the same address



Paging, it makes general intercom and sends a call to all the handsets of the system





		MOD = MM		
	2	3	4	5.
			N=1 N=3 IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	N=2
P+1 P+1 MOD= 9	P+1 P+1 MOD=9	N=1  N=2  N=2  N=1  N=1	N=2  N=3  N=1  N=1	N=3 N=3 N=1 N=3 N=3 N=1 N=3 N=3 N=1
P+1 P+1 M0D= 5	P+1 P+1 M0D=5	P+1 P+1 M0D=9	N=3 N=2 IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	N=2
P+2 P+2 MOD= 5	P+2 P+2 M0D=5	P+1 P+1 M00=5	P+1 P+1 M0D=5	P+1 P+1 M00= 5
M00=5	MOD= 5	P+1 P+1 M0D= 5	P+2 P+2 MOD= 5	P+2 P+2 MOD= 5

When configuring the device, wait one minute before connecting it to the system again.





	MOD = MM		
6 .	7	8	9
N=1  N=2  N=3  N=3  N=4  N=5  N=5	N=1  N=2  N=3  N=4  N=5  N=4  N=5	P+1 P+1 MOD= 9	P+1 P+1 MOD= 5
N=2  N=4  N=4  N=5  N=5  N=5	N=2  N=1  N=4  N=5  N=5  N=5	N=1  N=2	P+2 P+2 MOD= 5
N=3 N=4	N=3    N=1   N=4	P+1 P+1 MOD=5	P+3 P+3 MOD=5
N=4  N=1  N=3  N=5  N=5  N=5	N=4    N=1   N=3   N=3   N=1   N=3   N=1   N=3   N=1   N=1   N=3   N=1   N=1   N=3   N=1   N=1   N=3   N=1   N=1   N=1   N=1   N=3   N=1   N=1	P+2 P+2 MOD= 5	P+4 P+4 MOD= 5
N=5 N=1 N=3 N=2 N=4 N=4	N=5  N=1  N=3  N=2  N=4  N=4		

When configuring the device, wait one minute before connecting it to the system again.





### Maximum distances and cable features

CAUTION: The use of conductors with characteristics other than the prescribed ones does NOT guarantee correct performance of the system and good quality of the video signal.

## Single family video systems made only with Classe 100 and Classe 300EOS with Netatmo Internal Units

Cable section mm <sup>2</sup>	2 normal cables > 0.2 mm <sup>2</sup>	BTicino cable 336904 0.5 mm²	Telephone twisted pair 0.28 mm²	BTicino cable C9881U/5E AWG24 cable or UTP5 cable	BTicino cable 336904/336905 0.5 mm²	0ne PTT 278 TP 0.28 mm²	OneSYT +Digital TP 5/10	Unes Y I +Num TP 5/10	GIGATW CATSE AWG24	OneSYT +Num TP 8/10	Cable ARB.6060-1 6/10	Cable EV6R 6/10	1 mm²
Max. distance Entrance Panel - Internal Unit	50	m	140 m	145 m	200 m	200 m		145 m		200 m	50 ו	m	-
Max. distance Entrance Panel - Power supply	50	m	115 m	80 m	200 m	115 m		80 m		200 m	50	m	-
Max. distance Power supply - Internal Unit	25	m	50 m	30 m	110 m (*)	50 m		30 m		110 m	25 1	m	-
Max. distance Entrance Panel - Door lock	30	m	30 m	-	50 m	30 m		-		-	-		100 m

<sup>(\*)</sup> Note: if it is locally supplied 200 m.

### Multi-family video systems made only with Classe 100 and Classe 300EOS with Netatmo Internal Units

### Max. distance Entrance Panel - Furthest Internal Unit

Cable section mm <sup>2</sup>	2 normal cables > 0.2 mm²	BTicino cable 336904/336905 0.5 mm²	Telephone twisted pair 0.28 mm²	A pair of the multi-pair data cable CAT5
2 IU/2 pushbuttons	50 m	200 m	140 m	180 m
5 IU/5 pushbuttons	50 m	200 m	140 m	155 m
10 IU/10 pushbuttons	50 m	200 m	140 m	145 m
26 IU/26 pushbuttons	50 m	200 m	140 m	125 m
38 IU/38 pushbuttons	50 m	200 m	140 m	110 m
38 IU/ display call	50 m	200 m	140 m	115 m
64 IU/ display call	50 m	200 m	140 m	-

## Max. distance Power Supply - Furthest Internal Unit

Cable section mm <sup>2</sup>	2 normal cablesi > 0.2 mm²	BTicino cable 336904/336905 0.5 mm²	Telephone twisted pair 0.28 mm²	A pair of the multi-pair data cable CATS
5 IU (SHUNTED)	50 m	200 m	140 m	95 m
10 IU (SHUNTED)	50 m	200 m	140 m	95 m
26 IU (SHUNTED)	50 m	200 m	140 m	95 m
38 IU (SHUNTED)	50 m	200 m	140 m	95 m
64 IU (SHUNTED)	-	200 m	140 m	95 m

### Max. distance Entrance Panel - Power supply

5 pushbuttous       20 m       20 m       130 m       95 m         2 pushbuttons       50 m       200 m       130 m       95 m		
	Cable section mm <sup>2</sup>	b Inclino cable 336904/336905 0.5 mm² Telephone twisted pair 0.28 mm² A pair of the multi-pair data cable CAT5
5 nuchbuttons 50 m 100 m 120 m 95 m	2 pushbuttons	200 m 130 m 95 m
2 pusindutions 20 III 190 III 120 III 63 III	5 pushbuttons	190 m   120 m   85 m
10 pushbuttons 50 m 180 m 110 m 80 m	10 pushbuttons	180 m 110 m 80 m
26 pushbuttons 50 m 150 m 100 m 70 m	26 pushbuttons	150 m 100 m 70 m
38 pushbuttons 50 m 140 m 90 m 65 m	38 pushbuttons	140 m 90 m 65 m
Display call         50 m         150 m         95 m         65 m	Display call	150 m 95 m 65 m

### Max. distance Entrance Panel - Door lock

Cable section mm <sup>2</sup>	0.28 mm2	BTicino cable L4669 0.35 mm²	BTicino cable 336904/336905 0.5 mm²	1 mm²
(S+/S-) clamps	30 m	30 m	50 m	100 m

- Risers with max 26 internal units should be made in systems with more than 26 internal units
- Classe 300EOS with Netatmo always with additional power supply 1-2
- To ensure the correct operation of the system, we recommend the use of the YouDiagram software, which can be downloaded free of charge from www.professionisti.bticino.it




<sup>-</sup> In systems where the EP is replaced by apartment interface 346850, and where the distance Entrance Panel - Power Supply is less than 1 m, the distance Power Supply - Internal Unit can reach the maximum distance of 200 m when using the 336904/336905 cable.



# Wiring diagrams

Below are some examples of connection of the Classe 300EOS with Netatmo 344842 video handset in multi-family 2 wire video door entry systems.

## **DIAGRAM 1 - EXAMPLE OF MULTI-FAMILY SYSTEM**

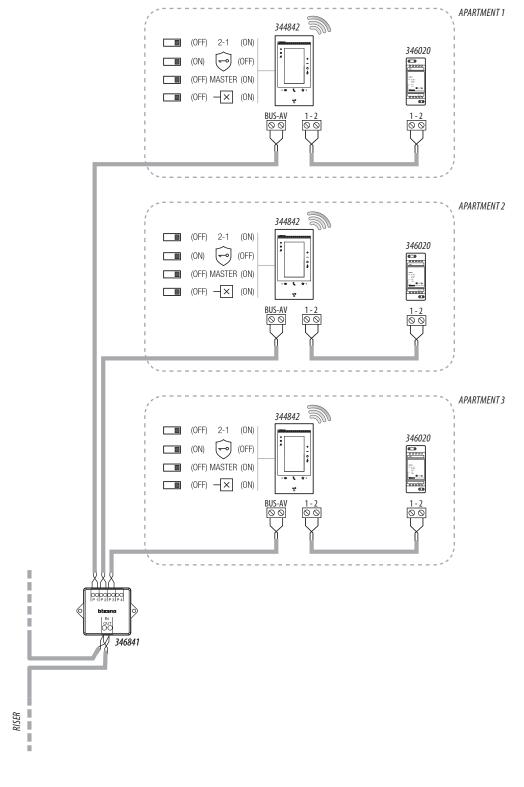


### Note:

- additional powersupply is mandatory;
- Classe 300EOS with Netatmo has to be installed only in installation tottally 2wire technology.





# DIAGRAM 2 - EXAMPLE OF MULTI-FAMILY SYSTEM WITH ADDITIONAL INTERNAL UNITS

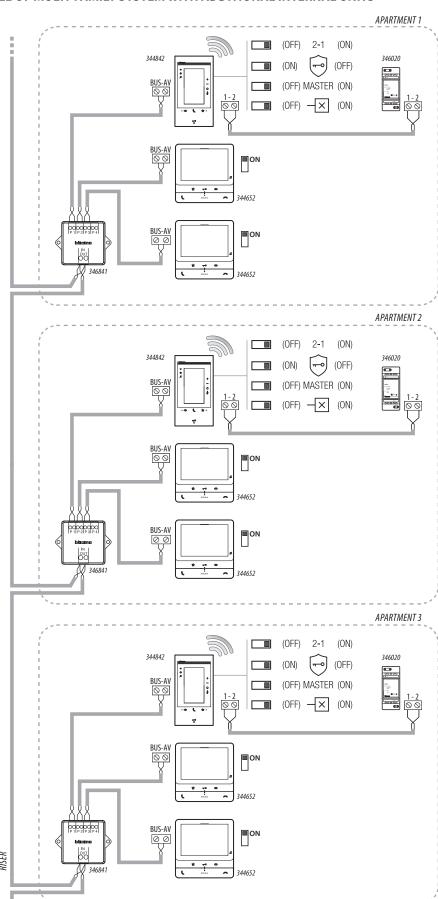



Note:

mandatory;

apartment;

technology.


additional powersupply is

• max 3 internal units for

• Classe 300EOS with Netatmo has to be installed only in installation tottally 2wire



## DIAGRAM 3 - EXAMPLE OF MULTI-FAMILY SYSTEM WITH APARTMENT INTERFACE 346850

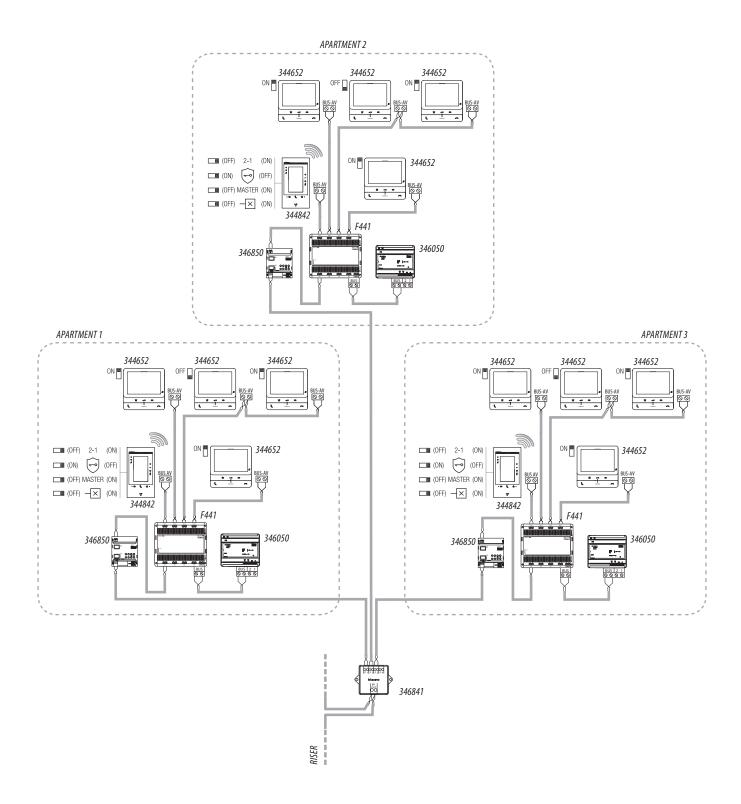


### Note:

- the use of an additional power supply is recommended to obtain the maximum performance of the device with Alexa®, but in this diagram it is not necessary for normal video door entry operation;
- max 5 internal units for apartment;
- Classe 300EOS with Netatmo has to be installed only in installation tottally 2wire technology.






### **DIAGRAM 4 - EXAMPLE OF SINGLE-FAMILY DIAGRAM**

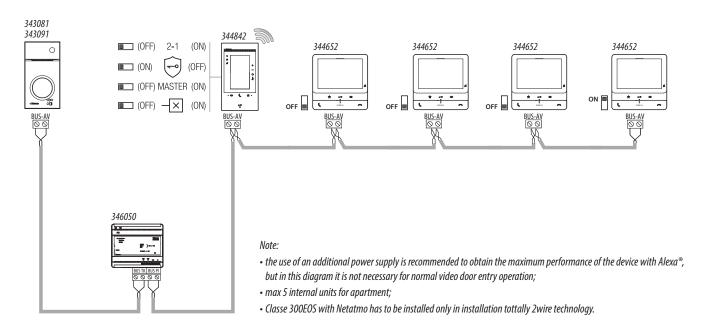

## SCHEMA 5 - EXAMPLE OF SINGLE-FAMILY DIAGRAM WITH 5 CLASSE 300EOS WITH NETATMO

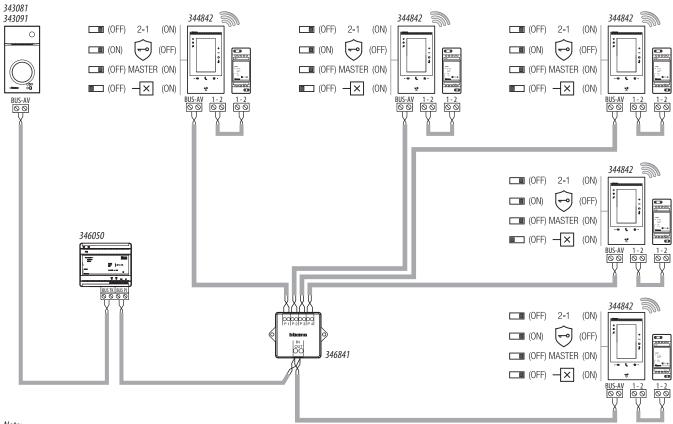


### Note:

- · the additional power supply is mandatory;
- max. 5 internal units for each apartment;
- Classe 300EOS with Netatmo must be installed only in systems completely made with 2 wires technology.





## **DIAGRAM 6 - EXAMPLE OF TWO-FAMILY DIAGRAM**

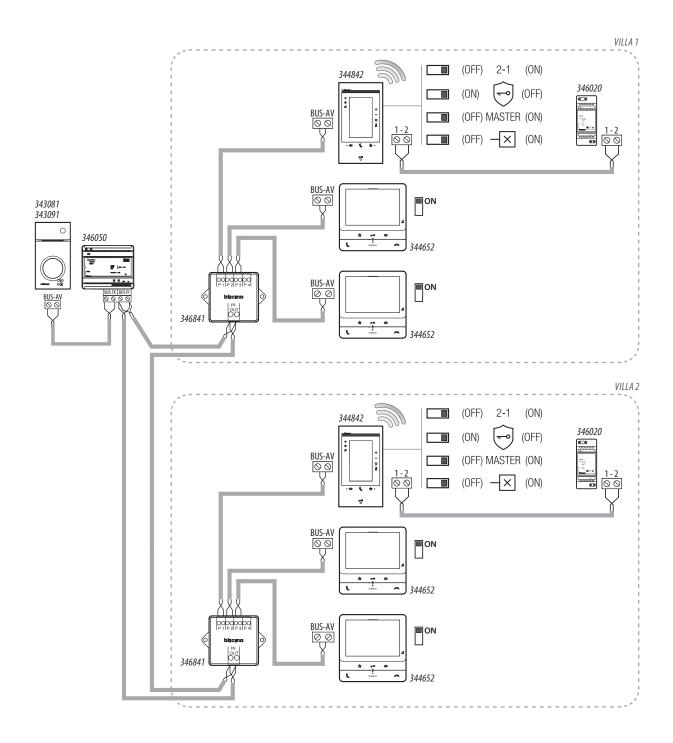

### Nota:

- max 3 internal units for apartment;
- Classe 300EOS with Netatmo has to be installed only in installation tottally 2wire technology.





### **Main functions**

From the Home Page of the device, it is possible to access the main functions, as described below:



The video handset offers the possibility to select among 6 types of bells with programmed ringtones, which can be freely associated to the following type of calls:

**Call from the entrance panel** (configured with S=0)

**Call from the entrance panel** (configured with S=1)

**Call from the entrance panel** (configured with S=2)

**Call from the entrance panel** (configured with S=3)

Intercom call within the apartment

Intercom call outside the apartment

Floor call

The association of the type of ringtone to the event is performed using the dedicated menu on the device.

Using the advanced configuration, the video handset gives the possibility of programming up to:

50 generic activations

50 direct activations to the door locks

40 intercoms within the apartment

40 intercoms outside the apartment

50 direct auto-switching on to the EP

### Video door entry answering machine

The video door entry answering machine allows (if enabled) to display a video message recorded by the visitor.

It is also possible to record an audio message to play back on the entrance panel in case of unanswered call.

### Intercom function

The intercom function allows for up to 3-minute communication between and among video door entry systems in the same apartment / in different apartments.

### **Door state function**

This function indicates the status of the door lock (only for systems preset with appropriate actuator). If open the "door lock LED" flashes, and if closed, the LED stays off. The function cannot be activated together with the Office function.

### Office function

The Professional Studio (Office) function gives the possibility of setting the automatic opening of the door lock in case of call from the Entrance Panel. It cannot be activated at the same time as the Door Status and Safe Door Lock functions. The door lock key flashing (varance) indicates that the functions is active.

### **Paging function**

This function can be used to send voice messages using the microphone of the device through the speakers of the sound system. To activate the function touch the appropriate icon on the Intercom menu. The green "Connection" LED on indicates that the function is active. To disable the function press the "Connection" key.

